



Assembly instruction ACO Therm 3.0

Straightforward installation

Installing in brickwork

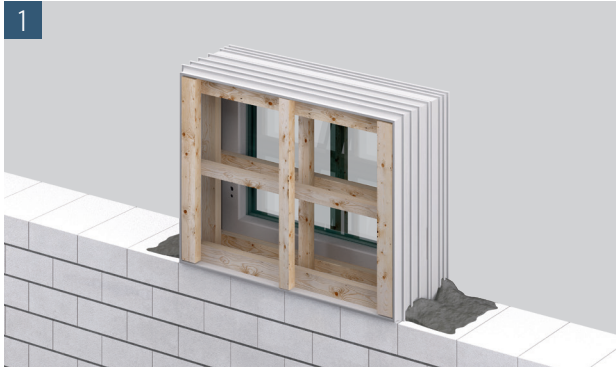

Set the windows firmly in the mortar.

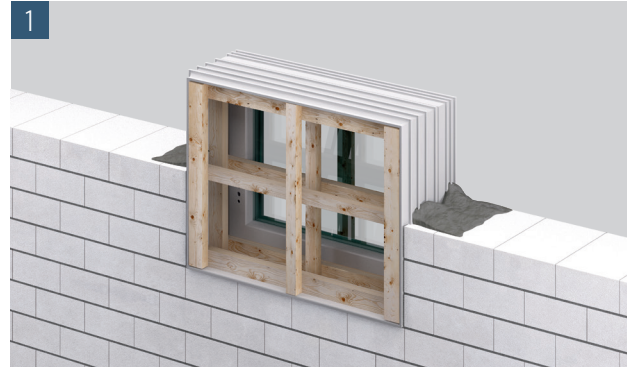

When building high walls, fill the space between the stone and the window with layers of mortar.



Wet the front lintel.



Remove stiffeners only after the mortar has hardened.

Assembly instruction ACO Therm 3.0

Straightforward installation

Installing in in-situ concrete



Measure the reveal window/support cross.



Fix the support cross horizontally.



Fix the support cross on the formwork.



Place the ACO Therm® reveal window on the fixed support cross and secure it with the perforated strips on the sides.




The support crosses remain in the reveal window until the end of the shell construction phase to protect them from damage.

Assembly instruction ACO Therm 3.0

Straightforward installation

Insulation connection profile

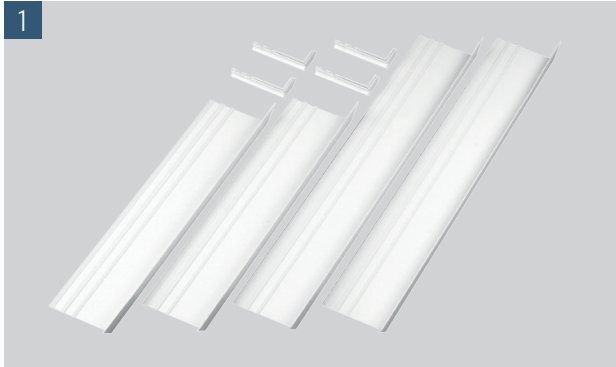

4-part insulation connection profile with corner connectors.



The insulation connection profile can be easily adapted to the insulation thicknesses of 100/80/60 cm or 110-200 mm required on site without the need for tools.



After the wall covering work has been completed, insert the assembled insulation connection profile into the groove left free by the removal of the formwork seal.



Fix by hammering into the groove (e.g. rubber mallet). Sealing between the insulation connection profile and the façade can be done with commercially available sealants.